



PG100 SERIES

600N/800N/1000N/1200N

GARAGE DOOR OPERATOR

for garage door - 24V ———— EN

INDEX

A. GENERAL SAFETY WARNINGS AND PRECAUTIONS

3

B. KIT CONTENT

4

- B1. KIT CONTENT
- B2. PRODUCT USAGE LIMITS
- B3. DIMENSIONS
- B4. P710U CONTROL BOARD

4

5

5

6

C. INSTALLATION

7

- C1. RAIL ASSEMBLY
- C2. ATTACH THE RAIL TO THE MOTOR
- C3. ATTACH THE RAIL ON THE HEADERWALL AND CEILING
- C4. CONNECT RELEASE SECTION TO THE GARAGE DOOR
- C5. FINAL STEPS BEFORE SYSTEM LEARNING
- C6. EMERGENCY RELEASE

7-8

8

9

10

11

11

D. TRANSMITTER MEMORIZING AND ERASING PROCESS

12

- D1. TRANSMITTER MEMORIZING AND ERASING PROCESS
- D2. ERASING TRANSMITER MEMORY
- D3. SYSTEM LEARNING , RESET PROCESS AND LED DISPLAY
- D4. RESTORE DEFAULT SETTING
- D5. PROGRAMMABLE FUNCTION INDICATION LED
- D6. PROGRAMMABLE FUNCTION SETTING

12

12

13

13

14

15-16

E. SMARTPHONE CONTROL WITH EYEOPEN MOBILE APPLICATION

17

- E1. Wi-Fi/Bluetooth BOX WB3
- E2. Eyeopen SYSTEM
- E3. APPLY FOR A NEW ACCOUNT
- E4. CONNECTING TO Eyeopen
- E5. OPERATION PAGE
- E6. RELATED SETTINGS - Wi-Fi SETTINGS
- E7. RELATED SETTINGS - PIN CODE SETTING
- E8. RELATED SETTINGS - PARAMETER SETTINGS
- E9. OWNER SHARE DEVICE TO USERS
- E10. PUSH NOTIFICATION
- E11. FAQ

17

17

18

19

20

20

21

21

22

23

24-25

F. SPECIFICATION

25

A. GENERAL SAFETY WARNINGS AND PRECAUTIONS

WARNING!

Please read this instruction manual carefully before the installation of gate-automated system.

This manual is exclusively for qualified installation personnel. Powertech Automation Inc. is not responsible for improper installation and failure to comply with local electrical and building regulations.

Keep all the components of the kit content and this manual for further consultation.

In this manual, please pay extra attention to the contents marked by the symbol: 

Be aware of the hazards that may exist in the procedures of installation and operation of the gate-automated system.

Besides, the installation must be carried out in conformity with local standards and regulations.

If the system is correctly installed and used following all the standards and regulations, it will ensure a high degree of safety.

Make sure that the gates work properly before installing the gate-automated system and confirm the gates are appropriate for the application.

Do not let children operate or play with the gate-automated system.

Do not cross the path of the gate-automated system when operating.

Please keep all the control devices and any other pulse generator away from children to avoid the gate-automated system being activated accidentally.

Do not make any modifications to any components except that it is mentioned in this manual.

Do not try to manually open or close the gates before you release the gear motor.

If there is a failure that cannot be solved and is not mentioned in this manual, please contact qualified installation personnel.

Do not use the gate-automated system before all the procedures and instructions have been carried out and thoroughly read.

Test the gate-automated system weekly and have qualified installation personnel to check and maintain the system at least every 6-month.

Install warning signs (if necessary) on the both sides of the gate to warn the people in the area of potential hazards.


B. KIT CONTENT

B1. KIT CONTENT

► MOTOR ◀



► ACCESSORIES ◀

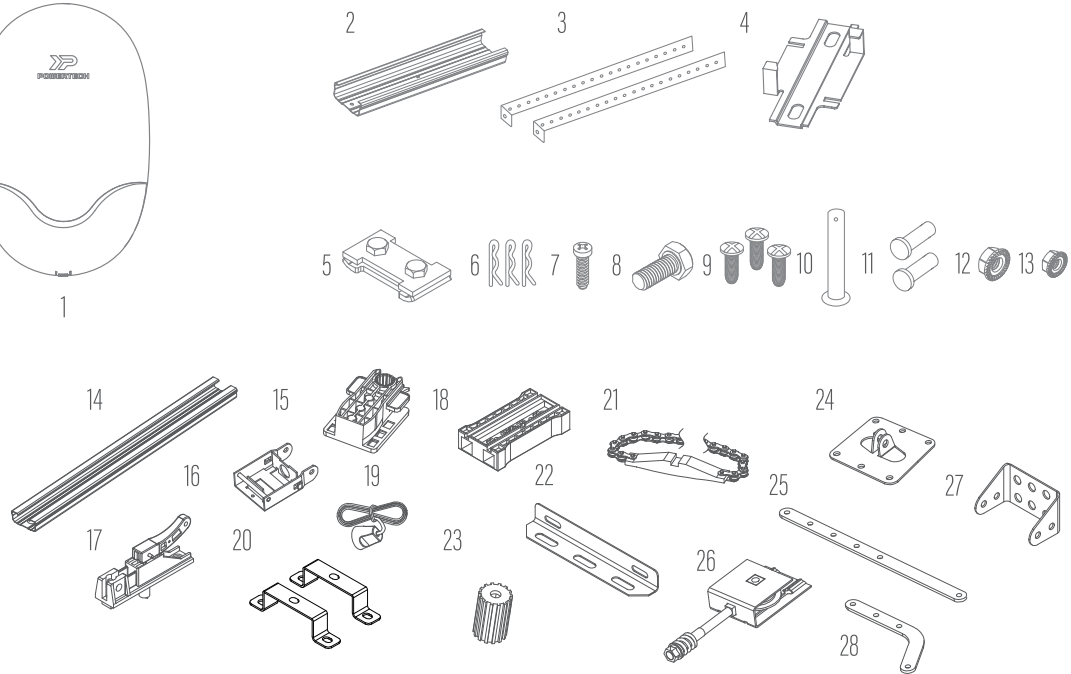


REF	DESCRIPTION	QUANTITY
1.	Motor	1
2.	Connecting rail	2
3.	Ceiling bracket (optional)	2
4.	Ceiling support bracket	1
5.	Blocker (optional)	1
6.	R pin	3
7.	M6 screw	4
8.	M8 bolt	2
9.	M4 screw	3
10.	Long clevis pin	1
11.	Clevis pin	2
12.	M8 nut	2
13.	M6 nut	8
14.	Rail	3
15.	Rear pulley support	1
16.	Front hold bracket	1
17.	Outer trolley assy	1
18.	Inner trolley assy	1
19.	Release rope	1
20.	Motor hold bracket	2
21.	Chain & Mortise	1
22.	Ceiling bracket (optional)	1
23.	Transition gear	1
24.	Door bracket	1
25.	Straight arm	1
26.	Front pulley tensioner	1
27.	Header bracket	1
28.	Bent arm	1


B2. PRODUCT USAGE LIMITS

Model	PG100-600N	PG100-800N	PG100-1000N	PG100-1200N
Category	DC Garage Door Motor			
Force	600N	800N	1000N	1200N
Max gate length / Max gate weight	8-10m ²	10-12m ²	12-14m ²	14-16m ²
Power Supply	AC 220 / 110V ; 50Hz~60Hz	AC 220 / 110V ; 50Hz~60Hz	AC 220 / 110V ; 50Hz~60Hz	AC 220 / 110V ; 50Hz~60Hz
Motor Power Supply	DC24V	DC24V	DC24V	DC24V
Power (W)	72W	80W	100W	120W
Gear type	Worm gear	Worm gear	Worm gear	Worm gear
IP Rating	IP44	IP44	IP44	IP44
Current (A)	3A	3.3A	4.2A	5A
Working temperature / Operating temperature	-20°C ~ +50°C	-20°C ~ +50°C	-20°C ~ +50°C	-20°C ~ +50°C
Dimensions (mm)	360 x 227.8 x 115	360 x 227.8 x 115	360 x 227.8 x 115	360 x 227.8 x 115
Manual release	Yes	Yes	Yes	Yes

B3. DIMENSIONS

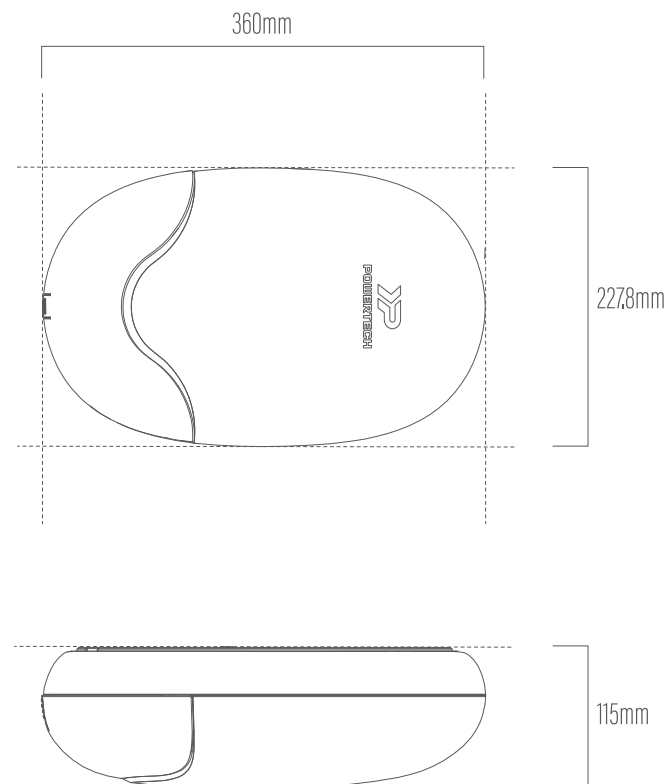


B4. P710U CONTROL BOARD

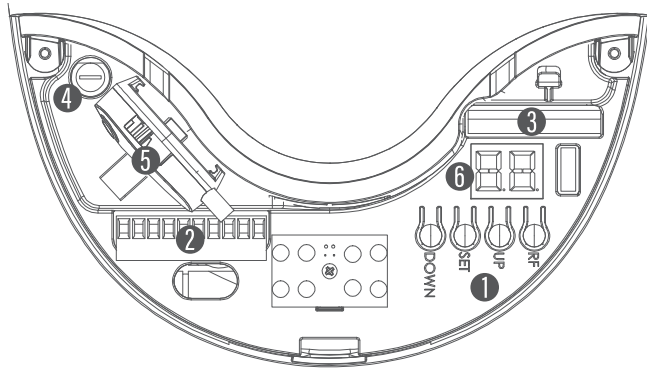



1. Operation buttons:
Remote Function key (RF Learn)
UP key (Up)
Setting key (Set)
Down key (Down)

2. Connection terminal of Optional accessories




6. LED DISPLAY

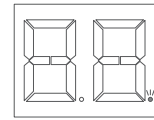

 *Note: the LED will turn ON when the motor is powered*

3. Radio receiver board
4. Fuse
5. Wi-Fi Box (Refer to Wi-Fi Box User Manual)

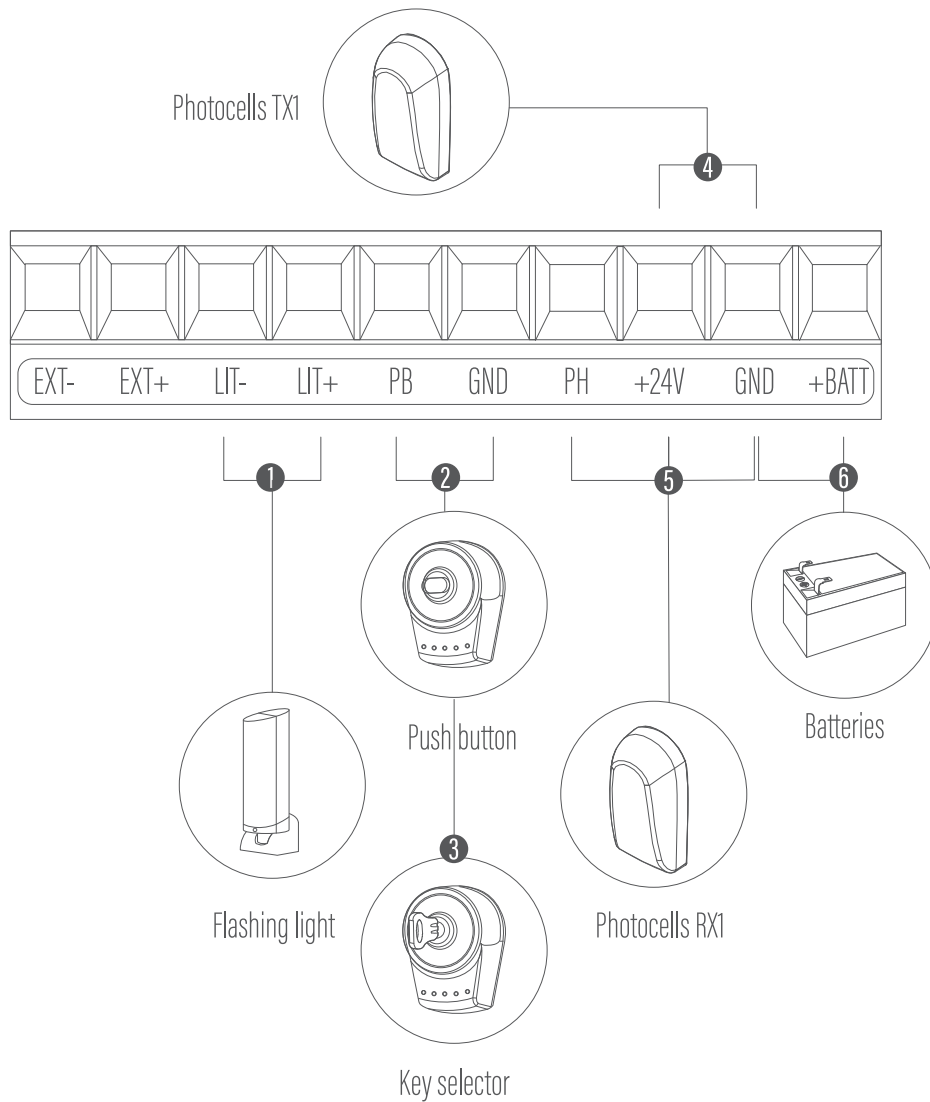


C. INSTALLATION

C1. RAIL ASSEMBLY


1. Fasten the (15) rear pulley support on the rear end of the (14) rail with (9) M4 screw(3 pcs).



2. Assemble the front and middle rail with the junction, and make sure is located at the middle of the protruding point.

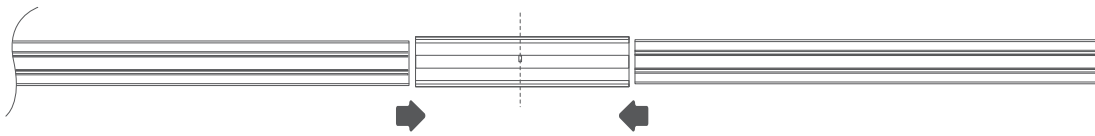


3. Assemble the back and middle rail with another junction, and make sure is located at the middle of the protruding point.

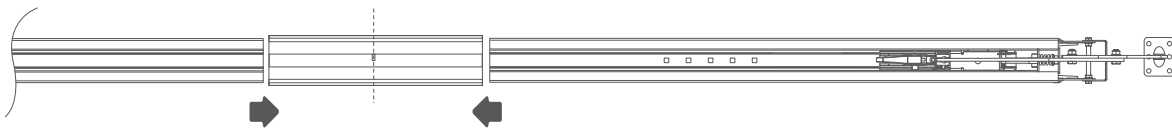

COMPLETE




4. Put the (18) inner trolley assy in the rail track, and put the (21) chain in the rail track. Make sure the mortise part is on left side of rail. Cross the (21) chain through the (26) front pulley tensioner, the (15) rear pulley support, and the (18) inner trolley assy. The mortise part should be placed in the front of the whole rail. Connect the (21) chain.

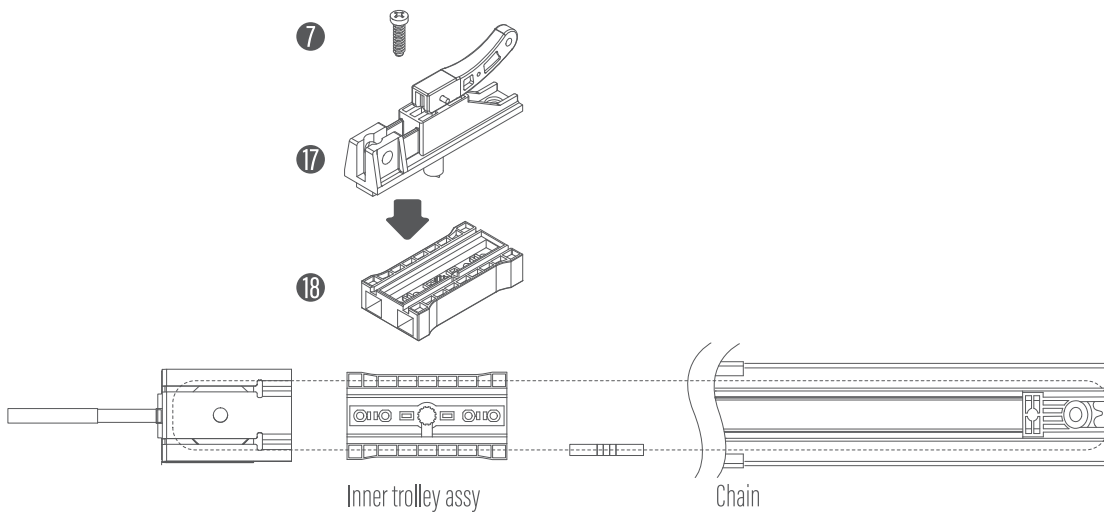




- Remove the nut and the spring in the 26 front pulley tensioner. Make sure the chain is placed in the gap of the pulley on the two sides. Insert the 16 front hold bracket against the rail. Use the spring and the nut to adjust the tightness of the 21 chain.

- 16 Front hold bracket
- 26 Front pulley tensioner
- 21 Chain & mortise

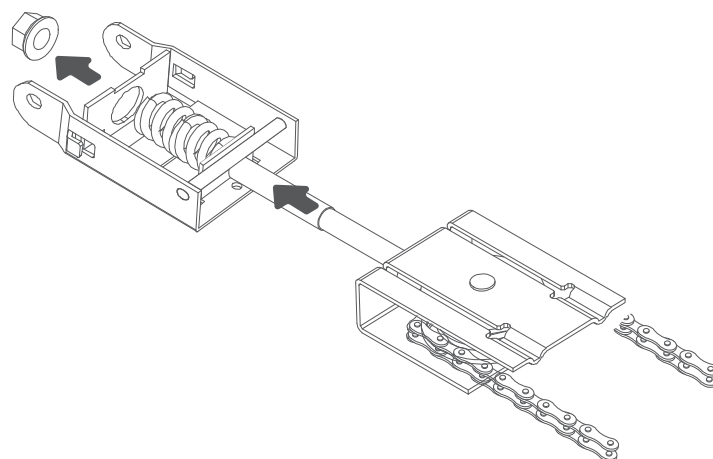

C2. ATTACH THE RAIL TO THE MOTOR

- Connect the insertion gap of the 15 rear pulley support and 23 transition gear to the output shaft of the motor.
- Fasten the rail on the motor with 20 motor hold bracket and 13 M6 nut.
- Fasten the 4 ceiling support bracket and 22 ceiling bracket at the rear side between the motor and the rear blocker(optional).

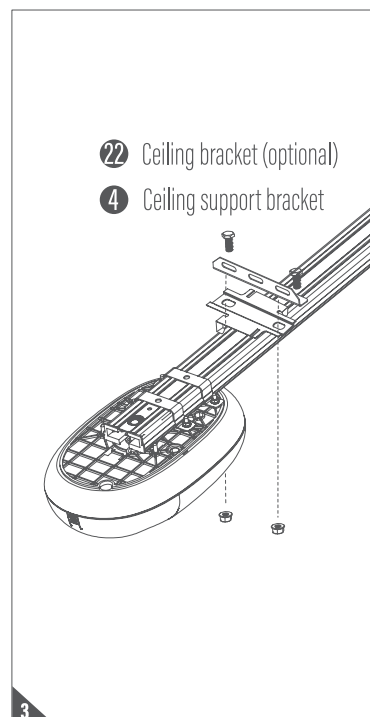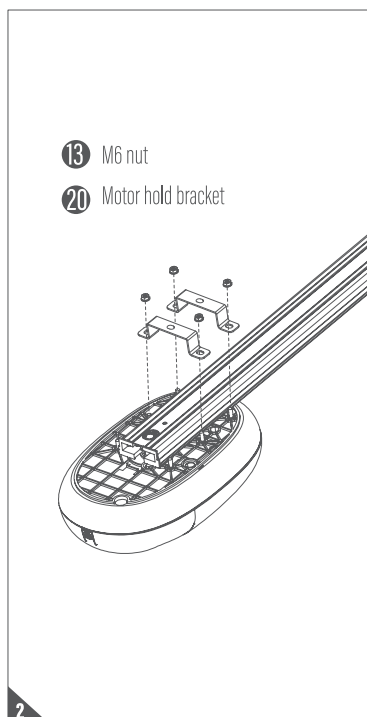
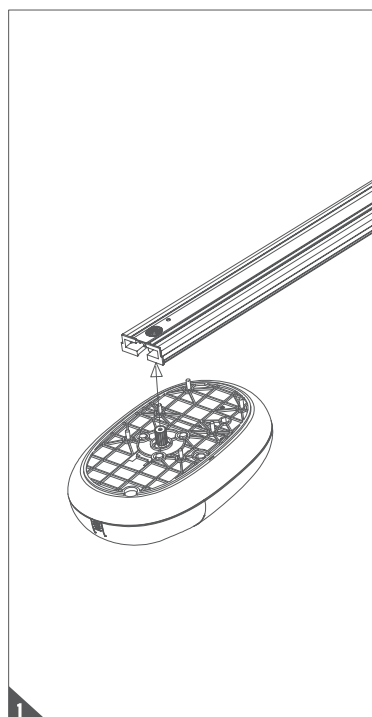


C3. ATTACH THE RAIL ON THE HEADERWALL AND CEILING

1. Fasten the 27 header bracket on the wall with expansion screw(not included),


 *It is recommended is positioned at the center of the garage door.
The installation height of the 27 header bracket varies from 30-50cm from the garage door.*

2. Align the assembled rail front rear against the 27 header bracket.
3. Attach the front rail to 27 header bracket with 6 R pin and 10 long clevis pin.
4. Attach the 22 ceiling bracket on the crossbeam of ceiling with crews.

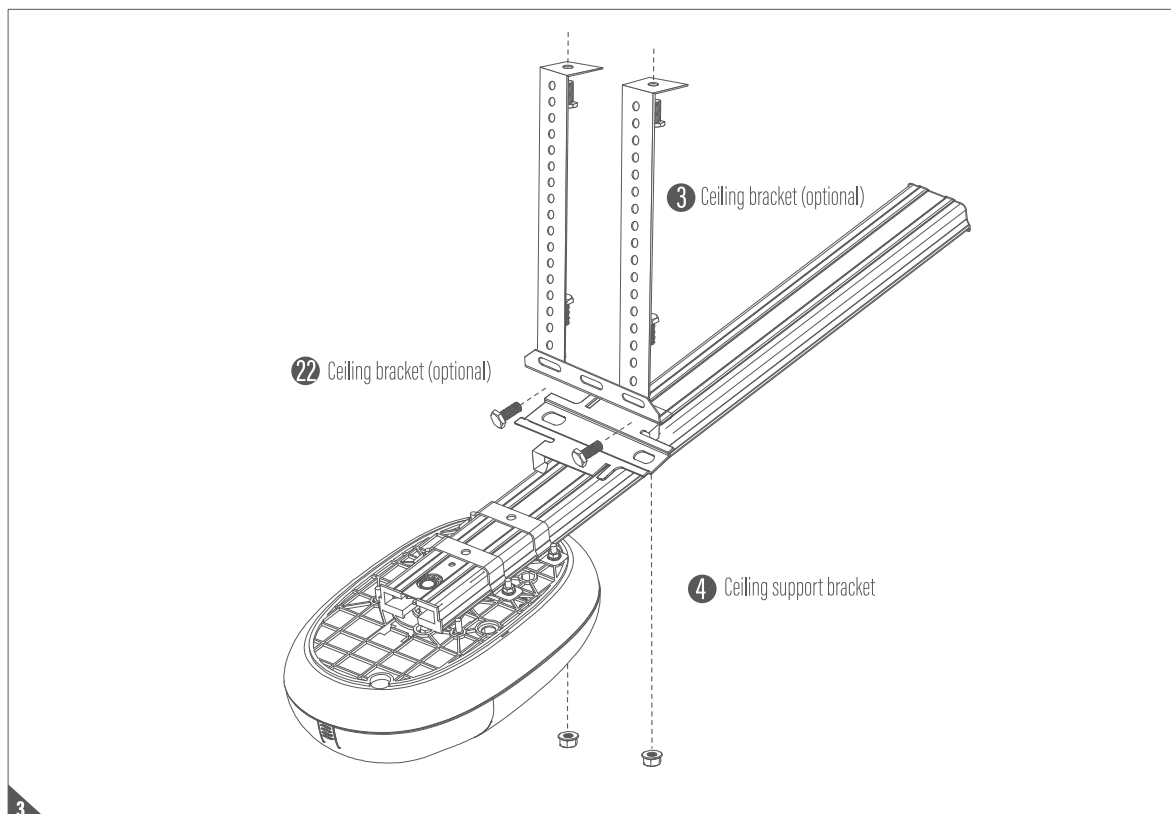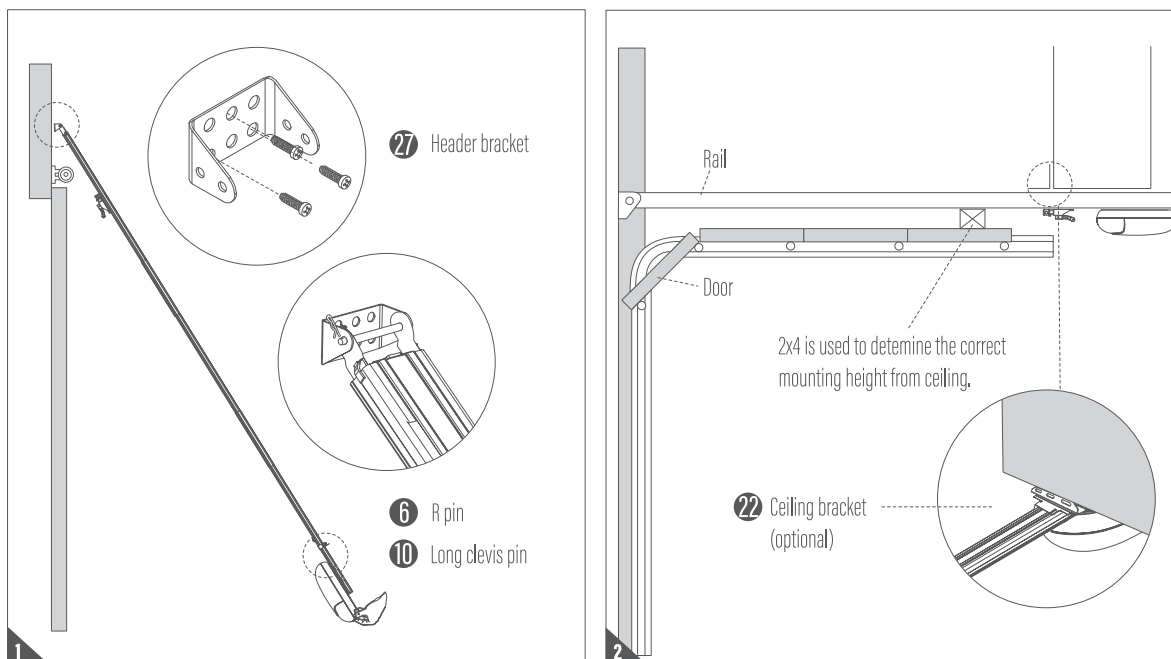

C4. CONNECT RELEASE SECTION TO THE GARAGE DOOR

1. Connect the **19** Release rope on the **17** Outer trolley assy.

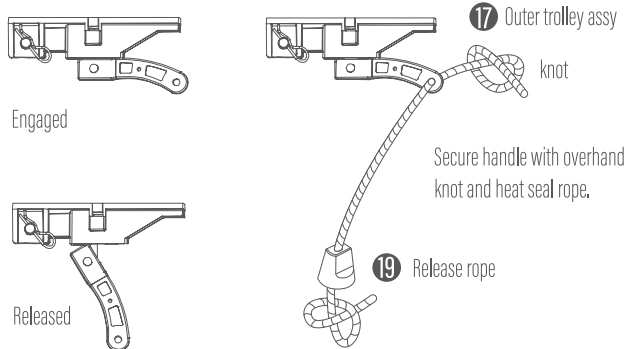

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a falling garage door:

If possible, use emergency release handle to disengage trolley **ONLY** when garage door is **CLOSED**. Weak or broken springs or unbalanced door could result in an open door falling rapidly and/or unexpectedly.





NEVER use emergency release handle unless garage doorway is clear of persons and obstructions.

NEVER use handle to pull door open or closed. If rope knot becomes untied, you could fall.

Handle should hang 6 feet (1.5 m) above floor. Ensure that the rope and handle clear the tops of all vehicles to avoid entanglement.



● CONNECT DOOR ARM TO TROLLEY

1. Pull the **19** release rope to disengage the **17** outer trolley assy.
2. Connect **25** straight arm to **17** outer trolley assy.
3. Fasten the **24** door bracket on the center of the garage door.
4. Connect **28** bent arm and straight arm with M8 bolts and M8 nuts.

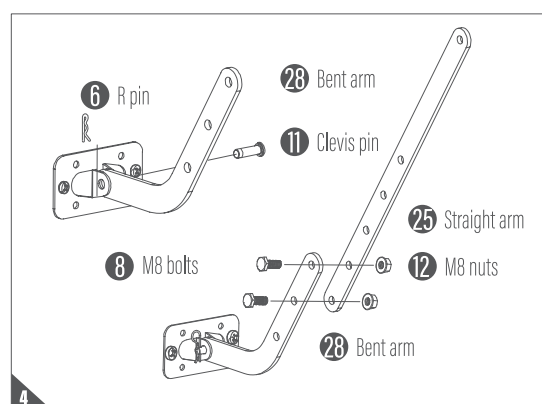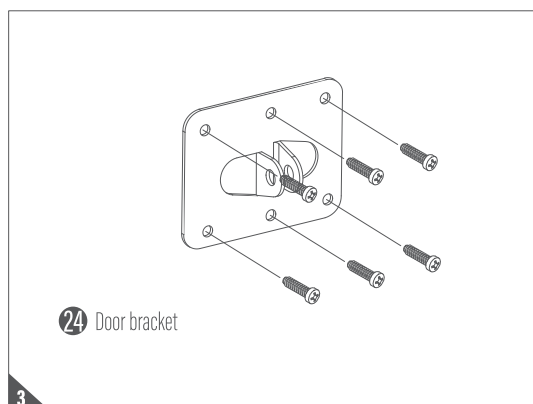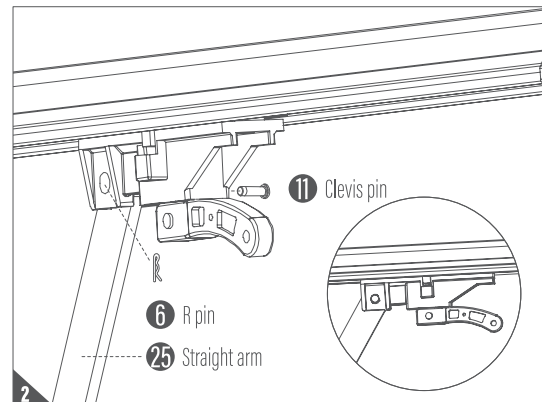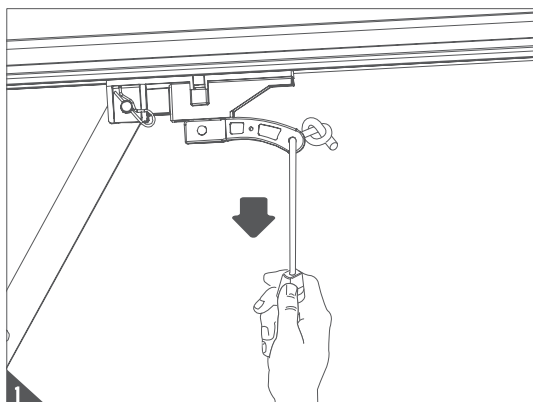

C5. FINAL STEPS BEFORE SYSTEM LEARNING

1. Install the blocker the 5 blocker on the door opened position.
2. Attached the warning sign to the 19 release rope.

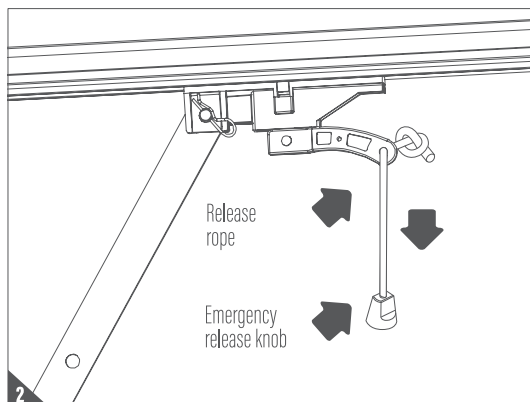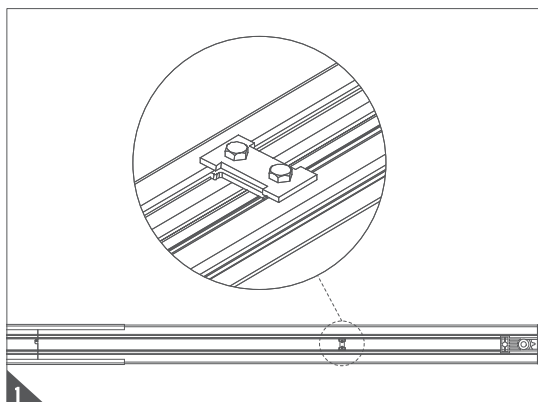

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution or fire:



Be sure power is not connected to the opener, and disconnect power to circuit BEFORE removing cover to establish permanent wiring connection.

Garage door installation and wiring **MUST** be in compliance with all local electrical and building codes.

NEVER use an extension cord, 2-wire adapter, or the opener is grounded.

C6. EMERGENCY RELEASE

1. Pull the 19 release rope to release the trolley. Make sure the trolley is disengaged. The garage door can be operated manually.
2. Before restarting the motor, manually move the garage door until the trolley is engaged.

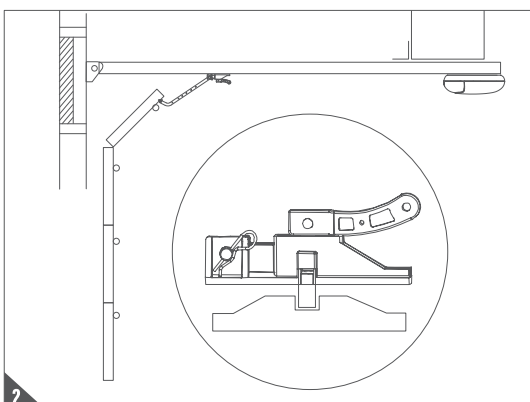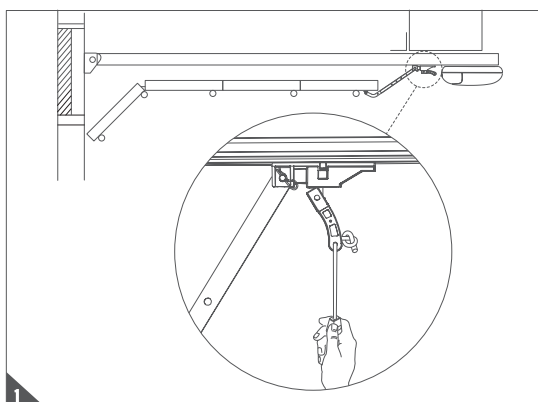


D. TRANSMITTER MEMORIZING AND ERASING PROCESS

D1. TRANSMITTER MEMORIZING AND ERASING PROCESS


● TRANSMITTER MEMORIZING

1. Press "RF Learn" button for 3 seconds.
2. The display will show "CS"; then press the transmitter A button within 10 seconds; the "CS" will blink three times and show "CS". After 10 seconds without any movement, "CS" will be off. The transmitter learning is completed.

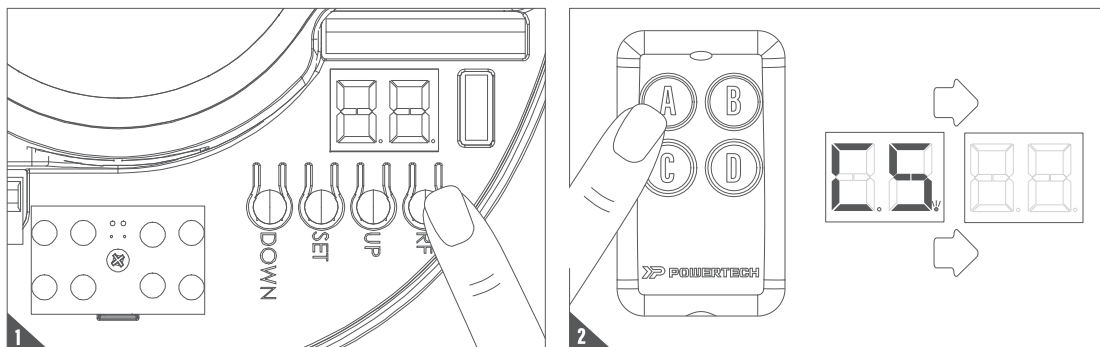

D2. ERASING TRANSMITER MEMORY

1. Press and hold "RF Learn" button for 10 seconds
2. The display will show "CS"; When "CC" shows up, the memory is cleared.

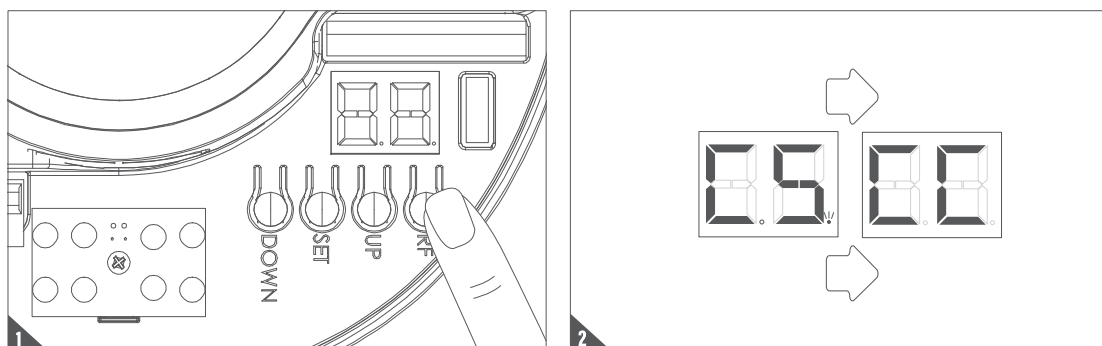


D3. SYSTEM LEARNING , RESET PROCESS AND LED DISPLAY


● SYSTEM LEARNING

1. Press and hold « RF » and « SET » buttons 3 seconds, the LED display shows « OL » and the motor enters system learning program.
2. Set up open limit and LED display shows « OL », Press and hold « UP » or « DOWN » button to raise or descend the door. When the door moves to the proper open position, press « SET » button.
3. Set up close limit and LED display shows « CL », Press and hold « UP » or « DOWN » button to raise or descend the door. When the door moves to the proper close position, press « SET » button.
4. The LED display blinks « GE » continuously.
5. Press « SET » or « A » button of the transmitter to proceed operation testing.
The LED display shows the operation current value in the process and memorizes overcurrent value.
6. The motor opens and closes automatically with full speed. The LED display shows « SO » while the system learning completes. The LED display shows « SF » while the system learning fails. The LED display will be off after 10 seconds.


! Note: The overcurrent function and flashing light function will be activated automatically after learning process complete.

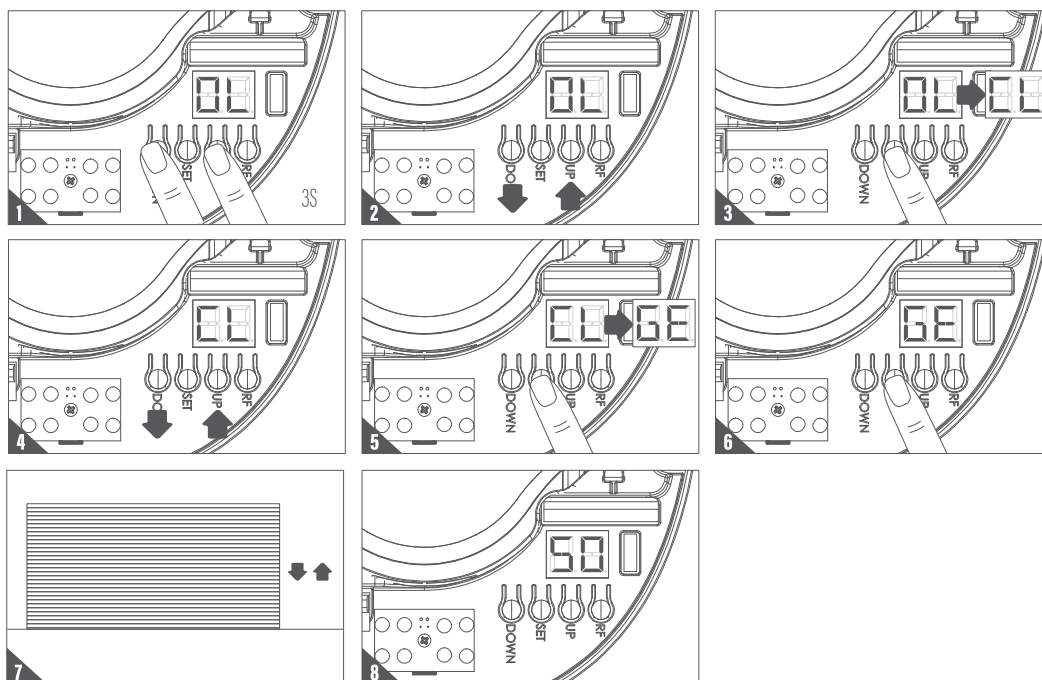

💡 Note : During the system learning procedure, the control panel will automatically detect the current consumption from each motor, indicate the resistance level of the gate whiling the motor operation. If this reading increase instantly or stay in high reading, please check if any object in between of the gate moving area, and contact your installer for inspection.

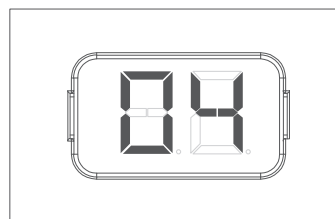


D4. RESTORE DEFAULT SETTING

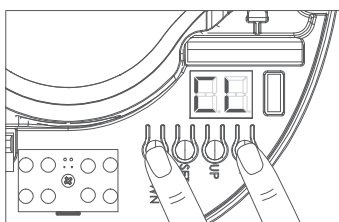


1. Press « RF » and « DOWN » buttons for 3 seconds, and the LED display shows « CL » to recover the default settings.


D5. PROGRAMMABLE FUNCTION INDICATION LED

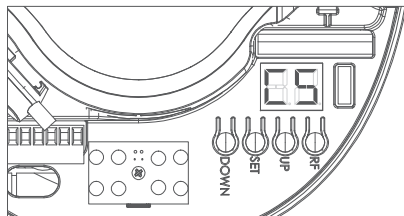


[CS] – Start transmitter learning mode.

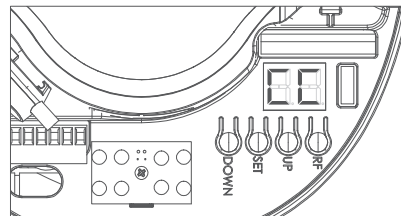


[CC] – Cleaned all studied transmitter.

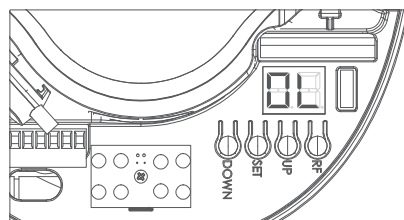


[OL] – Set up open limit.

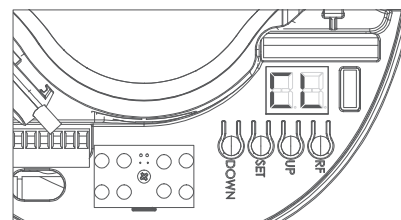


[CL] – Set up close limit.

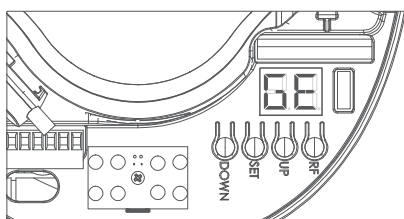


[GE] – Operation testing.

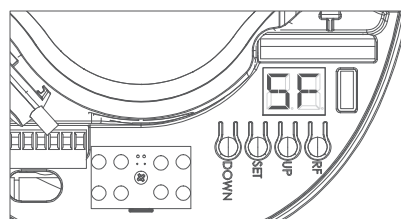

[SF] – System learning fail.

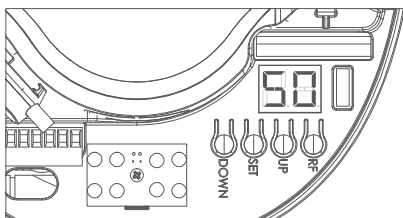

[SO] – System learning complete.

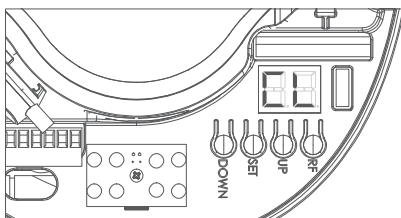

[CL] – System setting clear.

How to set the parameter

1. Press the « SET » key for 3 seconds, the display will show the function code.
2. Choosing the setting by « UP » and « DOWN » keys, after having chosen the indicated item, press the « SET » key and enter the setting of this function. The second digit will be shown on the right of the display, indicating the related function (please refer below chart for details). Using the « UP » and the « DOWN » keys to choose the setting function and press the « SET » key to save.


D6. PROGRAMMABLE FUNCTION SETTING

LED display	Definition	Function	Value	Description
1	Deceleration point (% full operation)	1-1 1-2 1-3 1-4 1-5	75% 80% 85% 90% 95%	The default setting is 1-3. The door will reverse 2cm if overcurrent occur in last 10% distance.
2	Main operation key	2-0 2-1 2-2 2-3 2-4	Function off Button A Button B Button C Button D	The default setting is 2-1.
3	Lighting key	3-0 3-1 3-2 3-3 3-4	Function off Button A Button B Button C Button D	The default setting is 3-2.
4	External device key	4-0 4-1 4-2 4-3 4-4	Function off Button A Button B Button C Button D	The default setting is 4-3.
5	Safety beam function mode	5-0 5-1 5-2	Function off Logic mode 1 Logic mode 2	The default setting is 5-0.
6	Alarm (Buzzer)	6-1 6-2	Function off Function on	The default setting is 6-1.
7	Auto closing	7-1 7-2 7-3 7-4 7-5 7-6 7-7 7-8 7-9	Function off 30 seconds 60 seconds 90 seconds 120 seconds 150 seconds 180 seconds 210 seconds 240 seconds	The default setting is 7-1.

LED display	Definition	Function	Value	Description
8	Lighting	8-1 8-2 8-3 8-4	Function off LED light starts running 1 minute LED light starts running 2 minute LED light starts running 3 minute	The default setting is 8-4.
9	Over-current reaction	9-1 9-2 9-3	Stop when overcurrent occur. Stop when overcurrent occur. Opening phase: Stop when over-current. Closing phase: Reverse 8-12 cm when over-current. Opening/Closing phase : Stop and reverse to the end when over-current.	The default setting is 9-2.
A	Overcurrent setting	1-0 2-0 3-0 4-0 5-0 6-0 7-0 8-0 9-0 9-9	Add 0.2A as overcurrent Add 0.4A as overcurrent Add 0.5A as overcurrent Add 0.6A as overcurrent Add 0.8A as overcurrent Add 1.0A as overcurrent Add 1.2A as overcurrent Add 1.4A as overcurrent Add 1.6A as overcurrent Add 1.8A as overcurrent	The default setting is 3-0.
C	Overcurrent setting of open limit	C-1 C-2 C-3 C-4 C-5 C-6 C-7	2A as overcurrent value of open limit 3A as overcurrent value of open limit 4A as overcurrent value of open limit 5A as overcurrent value of open limit 6A as overcurrent value of open limit 7A as overcurrent value of open limit 8A as overcurrent value of open limit	The default setting is C-3.
E	Overcurrent setting of close limit	E-1 E-2 E-3 E-4 E-5 E-6 E-7	2A as overcurrent value of close limit 3A as overcurrent value of close limit 4A as overcurrent value of close limit 5A as overcurrent value of close limit 6A as overcurrent value of close limit 7A as overcurrent value of close limit 8A as overcurrent value of close limit	The default setting is E-3.
F	Power supply for +24V terminal	F-1 F-2	Continuously power supply Sleep mode	The default setting is F-1. Sleep mode : power supply only when motor is opening.

E. SMARTPHONE CONTROL WITH EYEOPEN MOBILE APPLICATION

E1. Wi-Fi/Bluetooth BOX

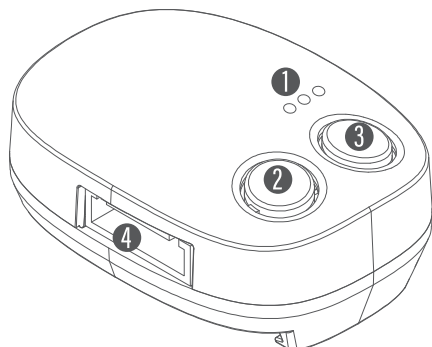

- ① LED display
- ② R button (press to restart)
- ③ P button
- ④ Terminals

● LED INDICATORS

Blue LED

The blue LED is an indicator of connection of Bluetooth.
The blue LED blinking indicates the WB3 is waiting for pairing.
The blue LED is **ON** when WB3 is connected to Bluetooth.

Green LED

The green LED is an indicator of Wi-Fi signal.
The green LED blinking indicates weak Wi-Fi signal.

Red LED

The red LED blinking indicates wrong operations or system errors.
Please refer to FAQ when the red LED is **ON**.

● BUTTON AND FUNCTION

R button: A reset button

P button: A pairing button

To restore the default settings: Press and hold the P button for 5 seconds and press the R button once. The blue LED will flash to indicate that the reset is complete.

E2. Eyeopen SYSTEM


Eyeopen is the App system on the smartphone provided by Powertech, allows you to operate your Powertech gate automations remotely through this App.

E3. APPLY FOR A NEW ACCOUNT

1. Please scan the QR code and download Eyeopen.
2. Press sign up icon and press the agree icon to continue.
3. Please type the following information for registration:



- a. Password (enter twice for verification)
- b. The password should have at least 1 English character and at least 8 characters/numbers in total.

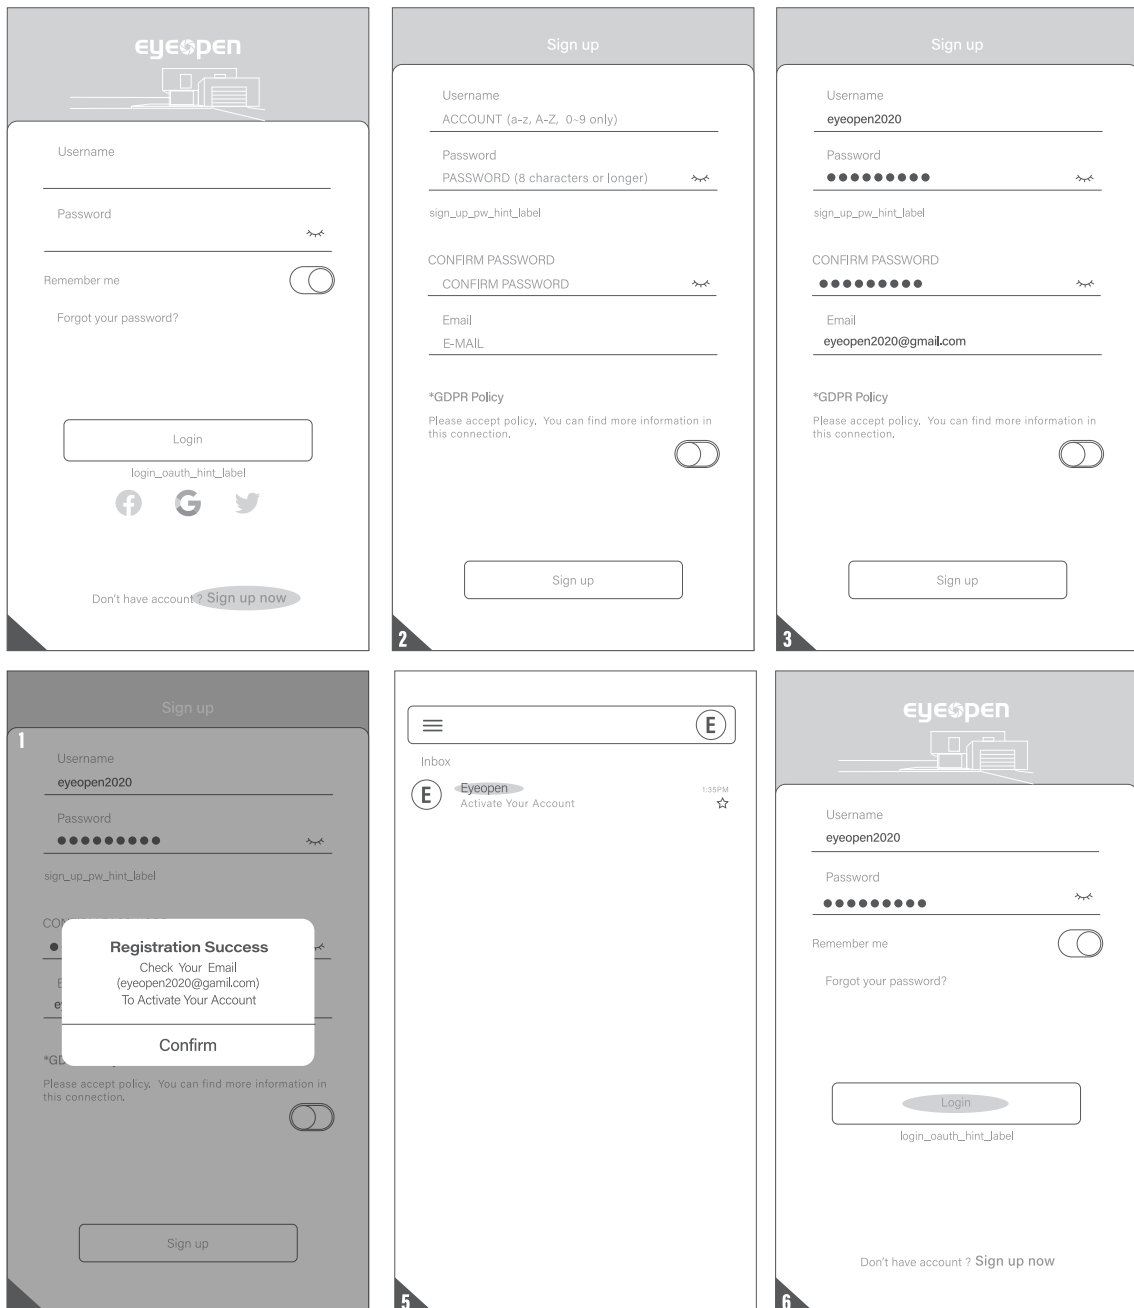

4. The system will send a link to your email when the registration succeeds.
5. Please go to your email, and click the link to activate your account.
6. Please log in to your account.

E4. CONNECTING TO Eyeopen

1. Please login your Eyeopen account. (Turn on the Bluetooth function of your smart phone.)
2. Tap the (+) icon to add a new device. Choose your product from the list.
3. Tap the Bluetooth icon and tap the device you are going to connect.
4. Set a PIN code twice and confirm.
5. Choose the device you are going to connect at available Eyeopen interface.
6. The device will start connecting.
7. After countdown, the device will show on the main page.





*Please keep your PIN code for further usage. PIN code will be used when you
1. Login on the new smart phone. / 2. Enter the parameter settings interface. / 3. Return to the factory default.*

💡 If you forgot your PIN code, please follow the indications in FAQ - Question 7 - Return to the factory setting.

E5. OPERATION PAGE

1. Open / Stop / Close / Pedestrian.
2. Settings page.

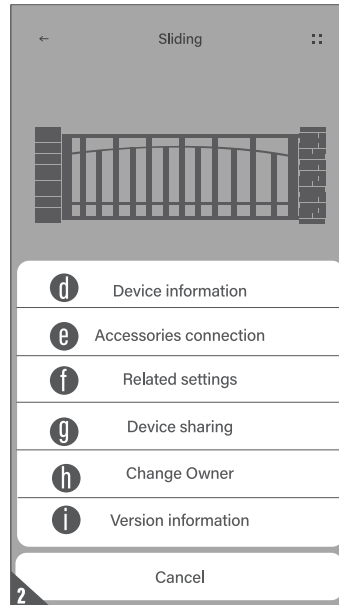
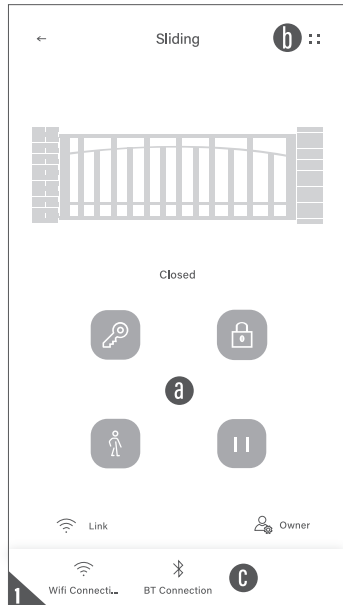


- a. Operation button
- b. Setting page
- c. Wifi / Bluetooth icon
- d. Device information
- e. Accessories connection
- f. Related settings
- g. Device sharing
- h. Change Owner
- i. Version information

E6. RELATED SETTINGS – WI-FI SETTINGS


1. Tap the Wi-Fi setting page to enter.
2. Select a new Wi-Fi . Tap confirm to start connection,

 Please make sure the password is correct.

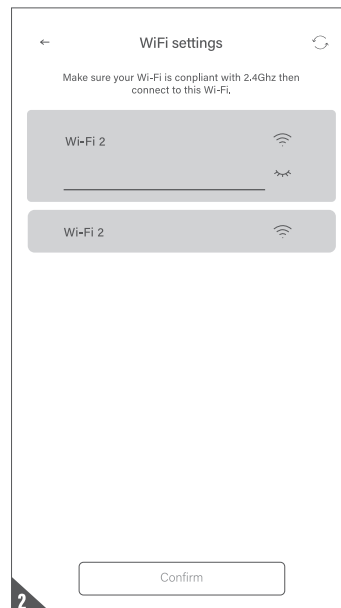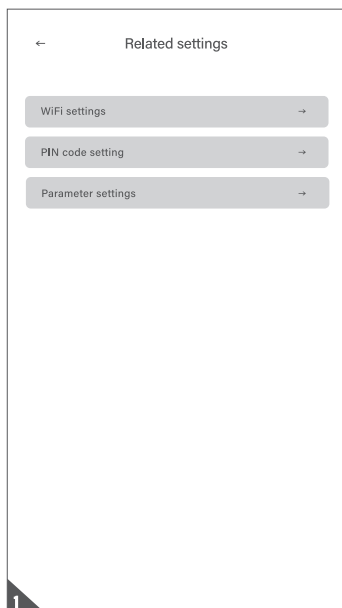


E7. RELATED SETTINGS - PIN CODE SETTING

1. Tap the PIN code setting to enter.
2. Enter current PIN code.
3. Set a new PIN code and confirm.

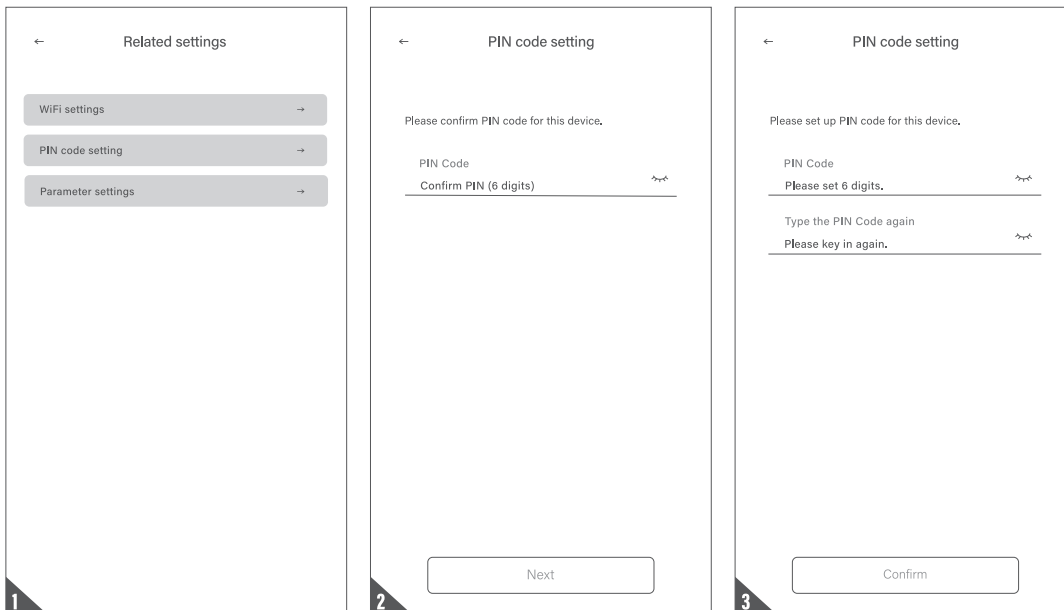







E8. RELATED SETTINGS - PARAMETER SETTINGS

1. Tap the Parameter settings to enter.
2. Key in the PIN code.
3. Change the parameter and save your changes.
4. Start the system learning via Eyeopen.

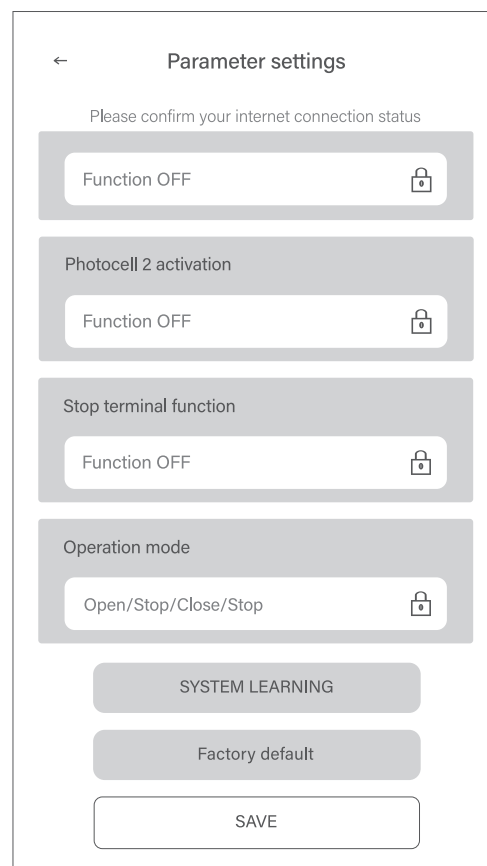

E9. OWNER SHARE DEVICE TO USERS


1. Tap the device on you main interface and enter the operation page.
Tap the (::) icon to enter the setting page.
2. Tap the device sharing.
3. Tap the create new group.
4. Name your group and set a duration for this group.
5. Invite users by an Eyeopen account and tap share.
6. The group icon will show at the (Device sharing) page.

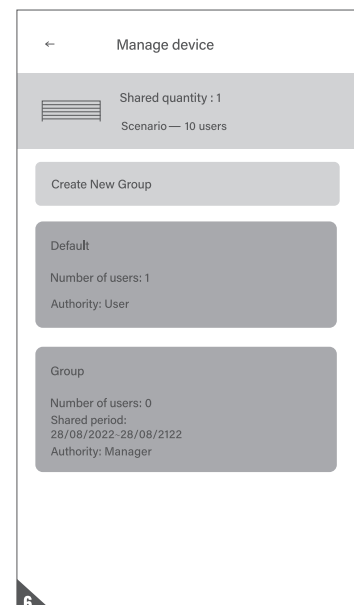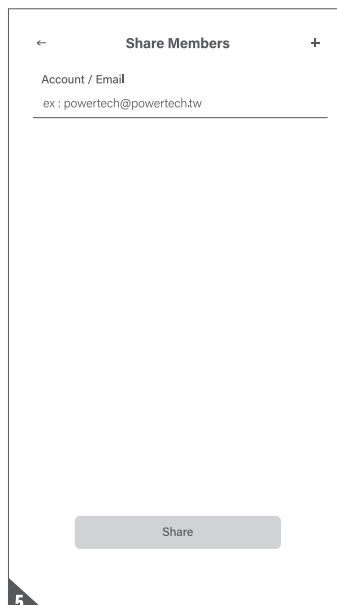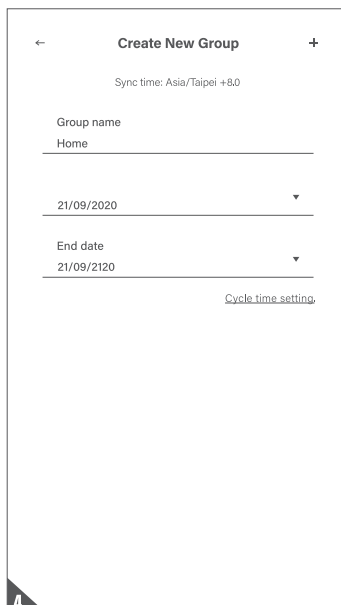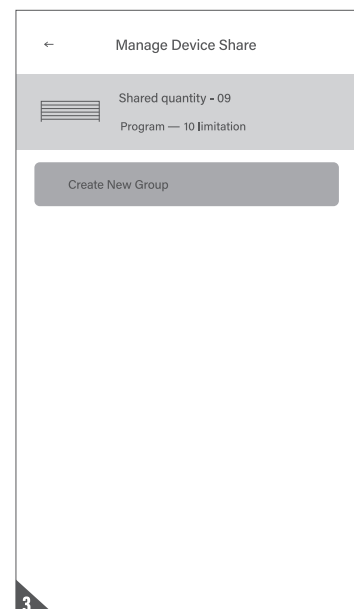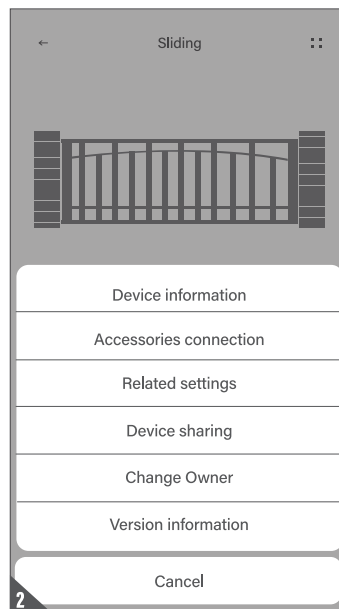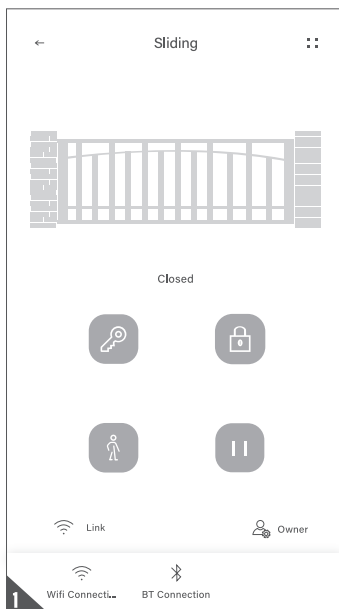

E10. PUSH NOTIFICATION

1. Press the icon on the upper left corner to enter the account management page.
2. Tap the push notification setting.
3. Turn **ON** the switches of the notification.

 Please go to the settings page of your smartphone. Find Eyeopen and allow the notifications.

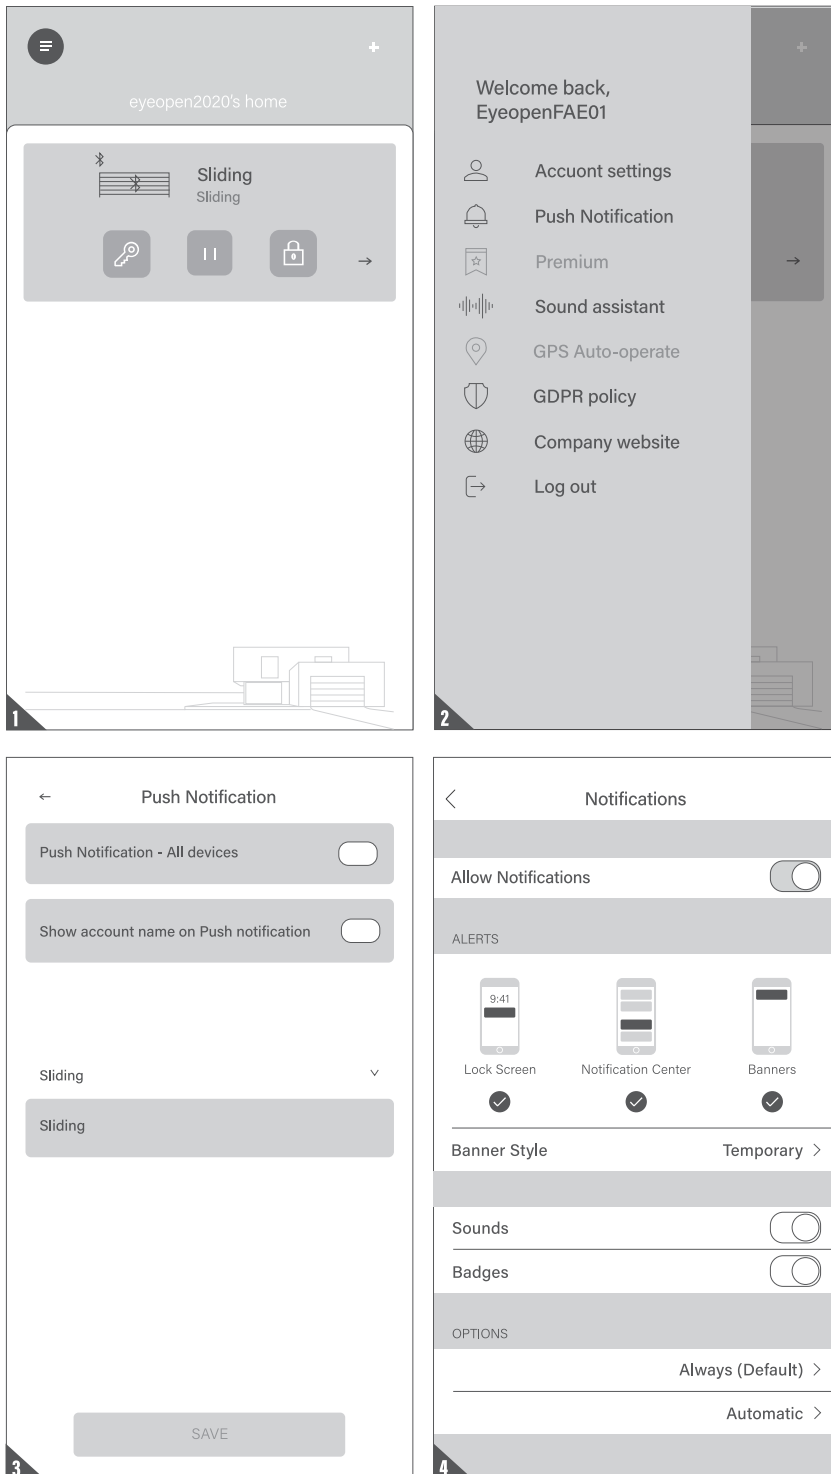

E11. FAQ

Question 1

The blue LED is **NOT** blinking when pairing.

Answer 1

Press the **P** button of the Wi-Fi box.

Question 2

Blue and green LED blinks alternatively when connecting to Eyeopen by the first user.

Answer 2

Entering a wrong password to your Wi-Fi network.

Question 3

Red LED blinks when connecting to Eyeopen by the first user.

Answer 3

The Eyeopen cannot get a IP from the router. Please disconnect other device.

Question 4

Red LED blinks when enter the PIN code.

Answer 4

Entering the wrong PIN code. Please confirm the correct PIN code with the first user.

Question 5

Green LED blinks.

Answer 5

The Wi-Fi signal is weak. Please adjust the antenna of the Wi-Fi box or adding an Wi-Fi amplifier to enhance Wi-Fi signal.

Question 6

Red LED on.

Answer 6

Red LED on indicates a system error. Please return to the factory setting as mentioned below.


Question 7

Return to the factory setting.

Answer 7

Return to the factory setting is used when you lose your PIN code for sharing the device.
After return to the factory setting, please follow the previous indications to reconnect Eyeopen.
Slide the device icon on the main page and tap the (delete) icon.
Open the cover of your motor and get to the Wi-Fi box.
Press the **P** button for 5 seconds and press the **R** button once.
The blue LED of the Wi-Fi box is blinking which indicates the device has returned to the factory default.

Please refer to page 5 "C1 connecting to Eyeopen"

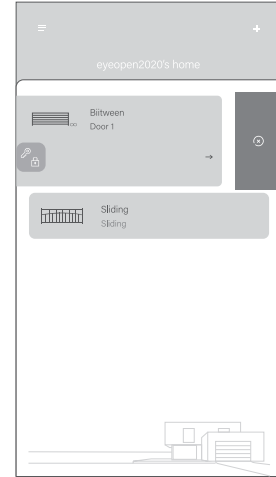

Question 8

How should I change my PIN code.

Answer 8

Enter the operation page of the device in EyeOpen ➡ Click the (Device Parameters) in the setting page ➡ Tap (Reset PIN).

F. SPECIFICATION

Mode	PG100-600N	PG100-800N	PG100-1000N	PG100-1200N
Force	600N	800N	1000N	1200N
Max door area	8-10m ²	10-12m ²	12-14m ²	14-16m ²
Motor volt	24 V	24 V	24 V	24 V
Running speed	140mm/s	140mm/s	140mm/s	140mm/s
Rail length	3,0/3,3m	3,0/3,3m	3,0/3,3m	3,0/3,3m
IP Rating	IP44	IP44	IP44	IP44
Working/Operating temperature	-20°C ~ +50°C	-20°C ~ +50°C	-20°C ~ +50°C	-20°C ~ +50°C
Dimensions (mm)	360x227,8x115	360x227,8x115	360x227,8x115	360x227,8x115
Remote frequency	433,93Mhz	433,93Mhz	433,93Mhz	433,93Mhz

